QUICK START GUIDE

ITEM 60703

5 in 1 PORTABLE POWER PACK

Charge Completely!

Immediately After Purchase

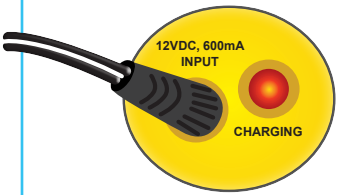

AC Charge Time
Initial Charge: 48 hours
Recharge: 34 hours

Do not exceed charge time.

Maintain The Battery!

Fully Recharge:

- **When Voltage Drops To 12V**
- **After Each Jump-Start**
- **Once a Month**

Failure to maintain the battery will void the warranty.

Jump-Starting a Vehicle

⚠WARNING

To prevent serious injury:

1. Do not touch positive and negative battery clamps together.
2. Do not connect to the negative terminal of the battery.

1

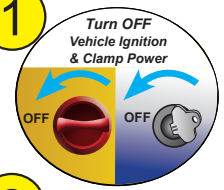

2

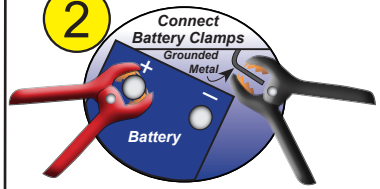

CONNECT RED POSITIVE CLAMP FIRST, THEN CONNECT BLACK NEGATIVE CLAMP TO A NON-MOVING METAL PART OF THE VEHICLE.

3

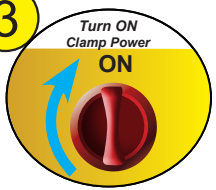

4

Wait 5 minutes!

AFTER TURNING CLAMP POWER ON, wait 5 minutes before starting ignition. THE VEHICLE WILL NOT START IF YOU DON'T WAIT 5 MINUTES!

5

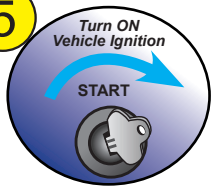

After the vehicle is started:

1. ***Turn OFF the Clamp Power.***
2. ***Remove the Black Negative Clamp.***
3. ***Remove the Red Positive Clamp.***

⚠WARNING

This Quick Start Guide is not intended to replace the Owner's Manual & Safety Instructions. Read all safety warnings and instructions therein to ensure proper usage and to avoid personal injury.

12k

Using the Air Compressor

Open Air Hose Compartment on the back of the unit and pull out the air hose.

Tire Inflation

1. Position the Tire Inflator over the valve stem and push down firmly. Press down on the lever.
2. Turn ON Compressor

3. Monitor the Air Pressure Gauge until the proper inflation level has been reached.
4. Turn OFF Compressor

Lift the lever and remove the hose.

Using Adapters

1. Three adapters are included with the Power Pack that can be attached to the Tire Inflator.
2. Attach the proper adapter, then follow steps 2-4 above.

⚠WARNING

To prevent serious injury:

1. Check the proper inflation level of the the object being inflated.
2. Monitor the Air Pressure Gauge on the front of the Unit.
3. Do not overinflate.

Powering Appliances

1. Turn OFF Inverter & Appliance

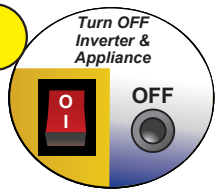

2. Plug Appliance into an Outlet

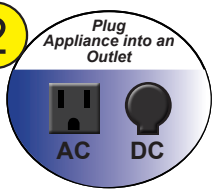

3. Turn ON Inverter

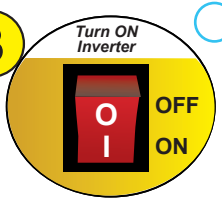

The Inverter Power light will illuminate

4. Turn ON Appliance

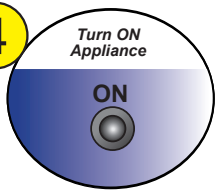

Typical AC Appliances & Run Times		
Appliance (120VAC)	**Estimated Power (Watts)**	**Estimated Lifetime (Hours)**
• Fluorescent Lantern	15	7 hr.
• Electric Bug Killer	40	2 hr. 30 min.
• DVD player	60	1 hr. 45 min.
• Laptop • Radio	75	1 hr. 25 min.
• Electric Blanket	100	1 hr.

Use this chart as a guideline only.
Actual power usage may vary based on the model or brand of the appliance. Check the actual wattage of your appliances and calculate the amount of power needed to start and run them.